

ID-Nr. 30116-002
Model S90.196.120.WDAS



Safety storage cabinet S-CLASSIC-90
Model S90.196.120.WDAS, warning yellow (RAL 1004)

Safe and approved storage of flammable hazardous substances in working areas

Function / construction:

- **Robust construction and longevity:** triple hinged door, body made of powder-coated sheet steel, safety elements assembled outside the cabinet for increased protection against corrosion
- **User-friendly and safe (model .WDAS):** door open arrest system, convenient and safe removal or storage of containers
- **No unauthorised use:** doors lockable with profile cylinder (integration in an existing locking system possible)
- **Easy alignment:** adjusting aids to compensate for uneven floor
- **Ventilation:** integrated air ducts ready for connection (DN 75) to a technical exhaust system

Dimensions	
Width (external)	1196.00 mm
Depth (external)	616.00 mm
Height (external)	1968.00 mm
Width (internal)	1050.00 mm
Depth (internal)	524.00 mm
Height (internal)	1742.00 mm

The available internal dimensions can vary depending on the interior equipment package.


Weight / Load	
Weight without interior equipment	420 kg
Distributed load	528.00 kg/m ²
Maximum load	600 kg

Ventilation	
Extraction air	75 DN
Minimum exhaust air quantity 10 times	10 m ³ /h
Differential pressure (10 times air change)	5 Pa


Colouring / Surface finish	
Body colour code	RAL 1004
Body colour	Warning yellow
Body surface finish	plain
Door / Drawer colour code	RAL 1004
Door / Drawer colour	Warning yellow
Door / Drawer surface finish	plain

General Information	
Number of doors	2
Door opening angle	89.00°
Interior grid dimension	32 mm
Depth with open doors	1173 mm
Customs tariff number	94032080

Front view

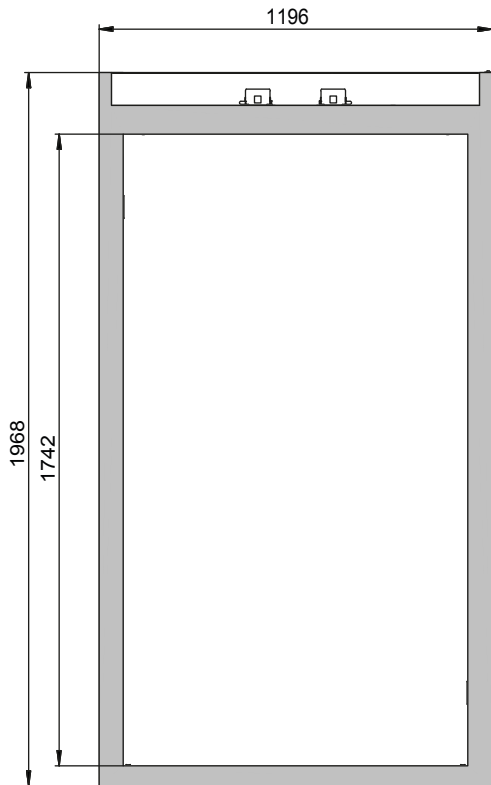

Side view

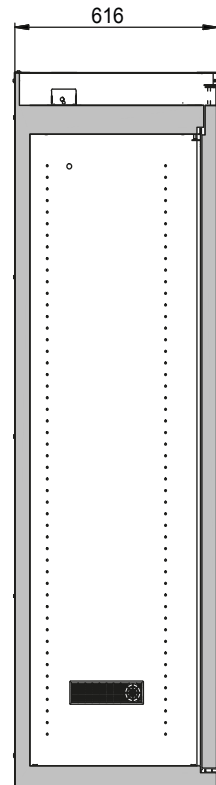

Top view

