

Pharmacy Plus Bluetooth Enabled Refrigerator

47L Pharmacy Plus Upright Fridge with Glass Door


GDMA code PPGR47BT-UK

SKU code 444411306



Key features

- ✓ Local monitoring and alarm history via Bluetooth
- ✓ Solid and glass door options
- ✓ Power failure alarm with backup battery powered recording
- ✓ Intelligent fan management system for enhanced performance

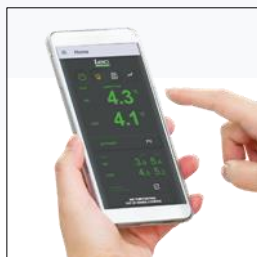

Bluetooth Connected Controller

Local temperature monitoring and alarm history via Bluetooth connectivity. Power failure alarm with battery back-up, providing continuous temperature monitoring in the event of power outage.

Lec Medical Smartphone App

Contactless local monitoring of air and load temperatures via smart phone app. Downloadable temperature report and alarm history.

Intelligent Fan Management

Smart fan optimisation aids in temperature stability following door openings, minimising fan activity when door is open to reduce the rate of temperature increase.

Dual Probe Temperature Monitoring

Our dual probe system offers greater temperature accuracy within your appliance, simultaneously measuring both air and product temperatures.

Flexible Internal Storage

Multiple shelf locations provides flexible storage solutions.

Specification: 47L Pharmacy Plus Upright Fridge with Glass Door

Gross Capacity (litres)	47L
Net Capacity (litres)	30L
Unit External Width (mm)	475mm
Unit External Depth (mm)	445mm
Unit External Height (mm)	565mm
Product Weight (kg)	17.5Kg
Packed Width (mm)	490mm
Packed Depth (mm)	530mm
Packed Height (mm)	620mm
Packed Weight (kg)	21.5Kg
Country of Origin	UK
Internal Dimensions (mm) (WxDxH)	403mm x 354mm x 425mm
Temperature Range	+2°C to +8°C
Colour	White/Green
External Finish	Painted Steel
Internal Finish	HIPS*
Type of plastic	SRL800 (HIPS/ABS mix)
Door Finish	PVC/ Glass
Door Type	Glass
Door Style	Hinged, Reversible
Door Liner	Flat
Number of Door Trays	n/a
Number of Door Tray Positions	n/a
Door Open Depth (mm)	905mm
Replacement Door Seal	No
Open Door Sensor	Yes
Lock	Yes, 2 Keys
Adjustable Feet (number & position)	2 adjustable (front)
Porthole	Yes
Porthole Size	16mm
Porthole Location	Rear LH Corner
Temperature Display on Panel	Yes
Temperature Alarm	Yes
Remote Alarm Contacts	Yes
Audible Alarms	Yes
Visual Alarms	Yes
Number of Shelves/Drawers	1
Number of Shelf Positions	3
Shelf Size (mm) (WxDxH)	416mm x 200mm x 6mm
Shelf Material	Polythene Coated Wire
Drawer Size (mm) (WxDxH)	n/a
Drawer Material	n/a
Number of Baskets	1
Basket Material	Polythene Coated Wire
Basket Size (mm) (WxDxH)	396mm x 165mm x 150mm
Interior Light	Yes
Light Type	LED
Light Activation	Door Switch / Controller
Fan	Yes - Axial
Spark Free	No
Defrost setting	Auto (Off Cycle)
Controller Type	Digital BT, External
Battery Back Up/Hours	No
Bluetooth	Yes
NFC	Yes
WIFI	No
Number of Probes	2
Probe Type	Air & Load (Glycol Solution)
Ambient Temperature Range	10°C to 32°C
Refrigerant Type	R600a
CFC Free	Yes
HFC Free	Yes
HCFC Free	Yes
Ammonia Free	Yes
UK 3 Pin Plug	Yes
Other Plug Types Available	Yes
Voltage Supply	220-240V
Insulation Thickness (mm)	40mm
Insulation Type	High Density Polyurethane Foam
Blowing Agent	Cyclopentane
Anti Microbial Handle	Yes
Wall Brackets	Yes
Optional Drawer System	No
Optional Digital Lock	No
Other Door Option	Solid PPSR47UK - 444410570