


ID-Nr. 32933-050
Model CX.229.105.MM.4WD

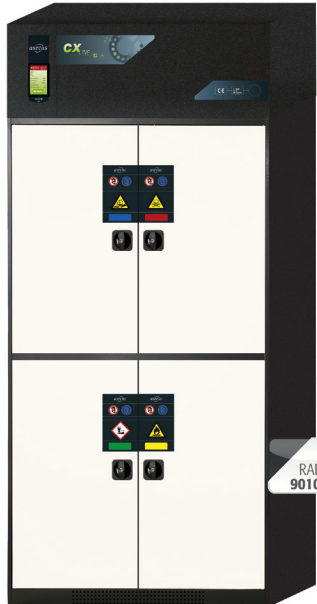

Recirculating air filter storage cabinet CX-CLASSIC-MultiRisk
Model CX.229.105.MM.4WD, body colour anthracite grey (RAL 7016), with wing doors in pure white (RAL 9010)

Safe, approved and separated storage of water pollutants, non-flammable liquids and toxics in working areas according to TRGS 510

Function / construction:

Cabinet body

- Robust construction and longevity — sturdy all welded construction suitable for highest industrial demands, high quality, scratch-resistant structured paint finish, double-walled door construction
- **All in one:** different compartments (multiple separation) allow the storage of different hazardous materials in one cabinet
- **No unauthorised use:** doors lockable with cylinder locking (integrated in the turning handle), each compartment can be opened and locked separately
- **Easy alignment:** adjusting aids to compensate for uneven floor

Recirculating air filter system

- Ideal for the direct installation in working areas – very low noise, only approx. 39 dB (A)
- With multi-stage wideband filter
- Monitoring electronics for extraction incl. cool-device cable and power plug
- Optical and acoustical alarm including potential-free alarm contact
- Display with innovative touch panel
- Manual check of the filter saturation

Dimensions	
Width (external)	1055.00 mm
Depth (external)	520.00 mm
Height (external)	2290.00 mm
Width (internal)	475.00 mm
Depth (internal)	495.00 mm
Height (internal)	905.00 mm

The available internal dimensions can vary depending on the interior equipment package.

Weight / Load	
Weight without interior equipment	98 kg
Distributed load	435.00 kg/m ²
Maximum load	600 kg

Electrical component	
Frequency	50 Hz
Nominal voltage	230 V
Maximum current consumption	0.5 A
Power consumption in operation	120 W
Power consumption in standby mode	50 W


Colouring / Surface finish	
Body colour code	RAL 7016
Body colour	anthracite grey
Body surface finish	textured
Door / Drawer colour code	RAL 9010
Door / Drawer colour	Pure white
Door / Drawer surface finish	textured

General Information	
Number of doors	2
Door opening angle	110.00°
Depth with open doors	1026 mm
Customs tariff number	94032080


Front view

Side view




Top view

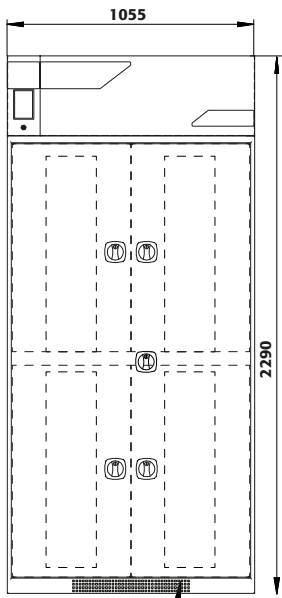

Natural ventilation

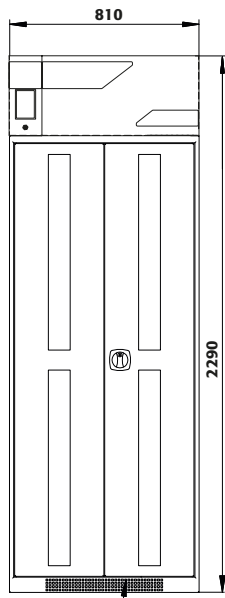

Natural ventilation

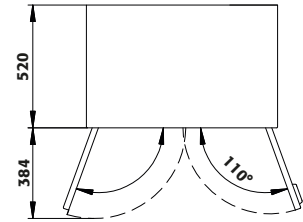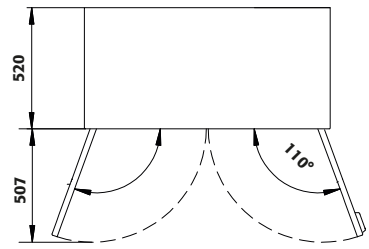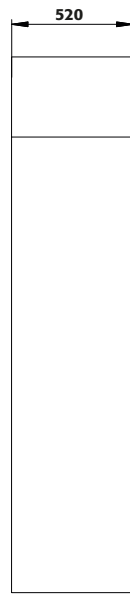

CX.229.105.WDFW / CX.229.105.MM.4WD **CX.229.081.WDFW**

For further information please visit www.asecos.com